



MalcoEdge– 2026 – 02

Release Date 08/20/2026

Revision A

SUBJECT: Safe Seal Hoses Washer Replacement

PURPOSE	This document will guide users through the process of replacing the washers on Safe Seal Hoses in the event users observe the core depressor is not sufficiently depressing Schrader cores. If the Safe Seal Hoses are still not properly depressing Schrader cores after performing washer replacement, please contact customer service at 320-274-7387 or via email at Technical_Services@malcogrp.com .
AFFECTED MODELS	SS3614516, SS3614, SS6014516, SS6014, SS7214516, SS7214
TOOLS REQUIRED	• 2mm Hex Key • Needle Nose Pliers
PARTS REQUIRED	• Replacement Washers (Contact Customer service for replacements)

NOTICE


There are small parts involved in this operation, please take care not to lose any of them.

PROCEDURE

1. Locate the 2 set screws that hold the turn knob in place. There will be one on each side of the knob.



2. Using the 2mm hex key, loosen or remove both set screws until the knob can slide off the end of the shaft.

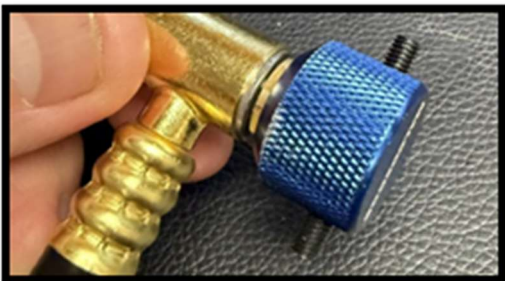

3. Remove the turn knob. This will expose a washer and bearing stack underneath the knob, which consists of two steel washers and a thrust bearing.



4. Remove the washers and bearing. Dispose of the washers and retain the thrust bearing.



NOTICE

The top washer may stick to the knob when being removed. If it sticks in the knob, use a needle nose pliers to remove it.



5. Put the NEW washers onto the stem in the order that the stack was removed. Line up the set screws with the depressions on the stem and tighten the set screws with the hex key. Fully seat the set screws.
6. Repeat this process for the other hoses.
7. The Safe Seal Hoses are now ready to use again.

