




Fix-it Foot & High Bloc

The neat and tidy rubber Fix-it Foot is simple, durable and comes in a variety of sizes. Extra clearance can be created using a High Bloc which fits underneath.

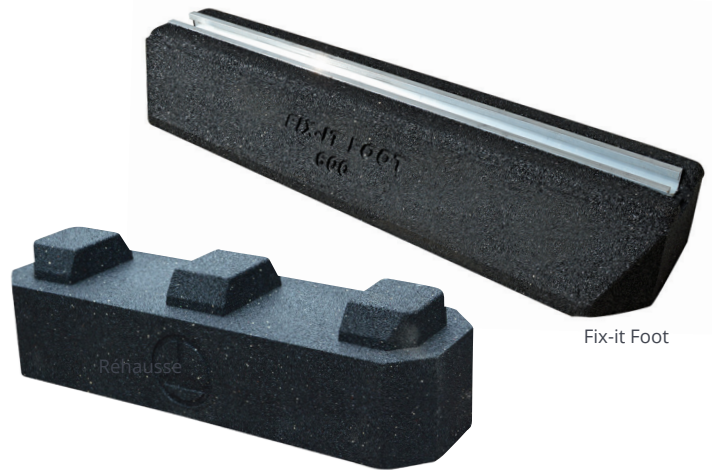

Fix-it Foot

Key Features

- Quick and simple install.
- Aluminium channel securely anchored in top for easy fixing of services.
- Wide range of height and length options available.
- Durable recycled rubber reduces vibration and adds stability.

Kit Includes

| | |
|-----------------|-----|
| Rubber Foot | × 2 |
| Bag with screws | × 2 |



Rubber pair with screw set

| Description | Product Code | Length (mm) | Width (mm) | Height (mm) | Weight (Kg) | Max. Load (Kg) | Pair with screw set |
|--------------------------------------|--------------|-------------|------------|-------------|-------------|----------------|---------------------|
| 250 | B6735 | 250 | 180 | 95 | 2.4 | 82 | |
| 250 - Rubber pair with screw set | B0084 | | | | | | |
| 400 | B6736 | 400 | 180 | 95 | 3.5 | 128 | |
| 400 - Rubber pair with screw set | B0085 | | | | | | |
| 600 | B6737 | 600 | 180 | 95 | 5.8 | 224 | |
| 600 - Rubber pair with screw set | B0386 | | | | | | |
| 1000 | B9096 | 1000 | 180 | 95 | 9.9 | 295 | |
| 1000 - Rubber pair with screw set | B0134 | | | | | | |
| 250 Low | B9043 | 250 | 130 | 50 | 1.3 | 82 | |
| 400 Low | B9045 | 400 | 130 | 50 | 2.1 | 128 | |
| 400 Low - Rubber pair with screw set | B0136 | | | | | | |
| 500 Low | B9368 | 500 | 130 | 50 | 2.5 | 134 | |
| 500 Low - Rubber pair with screw set | B0216 | | | | | | |
| 600 High Bloc | B6974 | 600 | 180 | 120 | 10.2 | 224 | |
| 1000 High Bloc | B6973 | 1000 | 180 | 120 | 17.7 | 295 | |

Information correct at time of going to press. Not all products are available in all regions.